

## HYUNDAI Sonata 2.4 User Guide

<b>Torque</b>	297 Nm @ 2500 RPM
<b>Displacement</b>	1773 cm <sup>3</sup>
<b>Power</b>	102 BHP @ 6000 RPM
<b>Fuel System</b>	Turbocharged Indirect Injection
<b>CO2 Emissions</b>	140 g/km
<b>Highway</b>	30.5 mpg US
<b>City</b>	20.8 mpg US
<b>Unladen Weight</b>	2557.3 lbs
<b>Gross Weight Limit</b>	3780.9 lbs
<b>Combined</b>	23.8 mpg US
<b>Width</b>	63.5 in
<b>Front/rear Track</b>	58.2/56.6 in
<b>Height</b>	53.1 in
<b>Length</b>	174.9 in
<b>Acceleration 0-62 Mph (0-100 kph)</b>	10 s
<b>Cargo Volume</b>	1.3 cuFT
<b>Tire Size</b>	205/45ZR16
<b>Top Speed</b>	124 mph
<b>Gearbox</b>	5 - Speed manual Quadrifoglio model
<b>Wheelbase</b>	97.4 in