

TOYOTA 4Runner 4.0 V6 4WD 5AT (236 HP) User Manual

| | |
|---------------------------|---------------------------|
| Torque | 266 lb-ft @ 5200 RPM |
| Front/rear Track | 57.4/57.4 in |
| Power | 303 HP @ 6800 RPM |
| Unladen Weight | 4275 lbs |
| Tire Size | 265/70R18 |
| Gross Weight Limit | 5,301 lbs |
| Displacement | 4130 cm ³ |
| Wheelbase | 121.9 in |
| Length | 195 in |
| Ground Clearance | 7.36 in |
| CO2 Emissions | 373 g/km |
| City | 22.3 mpg US |
| | Euro Spec. |
| Cargo Volume | 85 cuFT |
| Combined | 27.9 mpg US |
| Height | 62 in |
| Highway | 30.15 mpg US |
| Fuel System | Direct Injection Gasoline |
| Gearbox | 7-speed, Automatic |
| Width | 80.87 in |