

# TOYOTA Auris 5 Doors 1.8l (99 HP) User Guide

<b>Torque</b>	158.6 lb-ft @ 2400 RPM
<b>Wheelbase</b>	145.7 in
<b>Power</b>	96 KW @ 3600 RPM
<b>Unladen Weight</b>	5165 lbs
<b>Displacement</b>	3378 cm <sup>3</sup>
<b>Gearbox</b>	5-speed Electronically Controlled automatic Transmission with intelligence (ECT-i) and sequential shift mode
<b>Gross Weight Limit</b>	5330 lbs
<b>Tire Size</b>	225/70 R17  Total hybrid system power: 136 HP (100 kW)
<b>CO2 Emissions</b>	349.9 g/km
<b>Rear</b>	Solid Discs or Drums
<b>Front/rear Track</b>	67.9 in
<b>Ground Clearance</b>	10.4 in
<b>Cargo Volume</b>	42.7-89.7 cuFT
<b>Length</b>	228.7 in
<b>Cylinders</b>	L7
<b>Combined</b>	33.4 mpg US
<b>Fuel System</b>	Multi-port Injection
<b>Cd</b>	0.292