

## **TOYOTA Auris 5 Doors 1.8l (99 HP) User Guide**

<b>Gross Weight Limit</b>	4651.7 lbs
<b>Power</b>	148 BHP @ 5750 RPM
<b>Unladen Weight</b>	3979 lbs
<b>Ground Clearance</b>	4.8 in
<b>Torque</b>	228.6 lb-ft @ 1700-4600 RPM
<b>Acceleration 0-62 Mph (0-100 kph)</b>	13.9 s
<b>Length</b>	193.9 in
<b>Top Speed</b>	125.5 mph
<b>CO2 Emissions</b>	250 g/km
<b>Height</b>	57.5 in
<b>Wheelbase</b>	105.8 in
<b>Combined</b>	52.3 mpg US
<b>City</b>	27.6 mpg US
<b>Highway</b>	29.7 mpg US
<b>Displacement</b>	2598 cm <sup>3</sup>
<b>Tire Size</b>	205/55 R16W
<b>Gearbox</b>	4 speed automatic
<b>Width</b>	70.2 in
<b>Cargo Volume</b>	18 cuFT
<b>Front/rear Track</b>	59.8/59.8 in