

# TOYOTA Avensis 2.0 TD Owners Manual

|                           |   |
|---------------------------|---|
| <b>CO2 Emissions</b>      | 310.8 g/km  |
| <b>Highway</b>            | 80.7 mpg US   |
| <b>Gearbox</b>            | Electronically controlled Continuously Variable Transmission (ECVT)           |
| <b>Wheelbase</b>          | 127.2 in  |
| <b>Torque</b>             | 170 Nm @ 2000 RPM<br>Front Motor - 193 kW (259 HP)                            |
| <b>Fuel System</b>        | 85 kWh Li-ion battery pack  |
| <b>City</b>               | 48.7 mpg US   |
| <b>Unladen Weight</b>     | 3140 lbs  |
| <b>Gross Weight Limit</b> | 3042.9 lbs  |
| <b>Power</b>              | 28 KW @ 5500 RPM  |
| <b>Combined</b>           | 58.9 mpg US   |
| <b>Displacement</b>       | 3956 cm <sup>3</sup>  |
| <b>Tire Size</b>          | P175/65R15  |
| <b>Front/rear Track</b>   | 58.5/57.9 in  |
| <b>Ground Clearance</b>   | 5.65 in   |
| <b>Rear</b>               | Drums 7.87 in.  |
| <b>Front</b>              | Drum  |
| <b>Cargo Volume</b>       | 9.32 cuFT   |
| <b>Length</b>             | 136 in  |
| <b>Width</b>              | 58.4 in   |
| <b>Cylinders</b>          | 375 volt AC induction air-cooled electric motor with variable frequency drive |